




COOKTOP PARTS

For Models: RF367LXSQ3, RF367LXSB3, RF367LXSS3, RF367LXSY3
(Designer White) (Black) (S.Steel)(Universal Silver)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

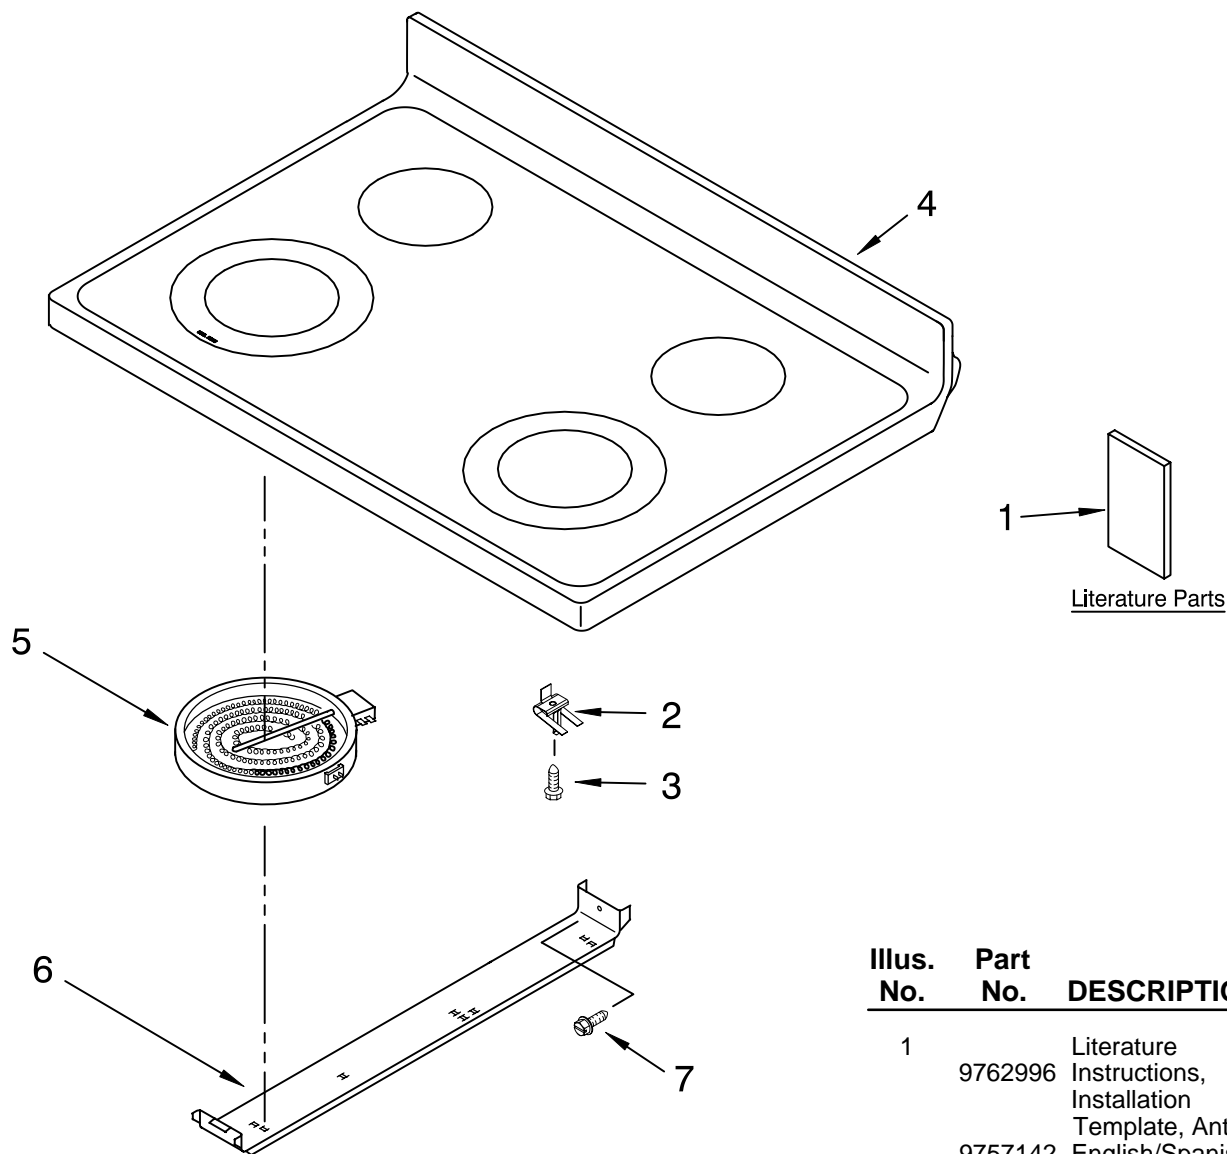


| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--|
| 1 | 9762996 | Literature Instructions, Installation Template, Anti-Tip |
| | 9757142 | English/Spanish |
| | 9757143 | English/French |
| | 9763001 | Owners Manual |
| | W10133896 | Tech Sheet |
| | 9762761 | Safer Cooking Tips |
| 2 | W10035930 | Spring, Locator |
| 3 | 3196170 | Screw |
| 4 | | Cooktop |
| | 9763330 | White |
| | 9763332 | Blk/Stls/Unv Slv |
| 5 | | Element, Surface |
| | 8523047 | 2400/1000W – LF,RF |
| | 8273994 | 1200 W – LR,RR |
| 6 | 8272791 | Bracket, Element |
| 7 | 3196169 | Screw |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF367LXSQ3,RF367LXSB3,RF367LXSS3,RF367LXSY3

(Designer White) (Black) (S.Steel)(Universal Silver)

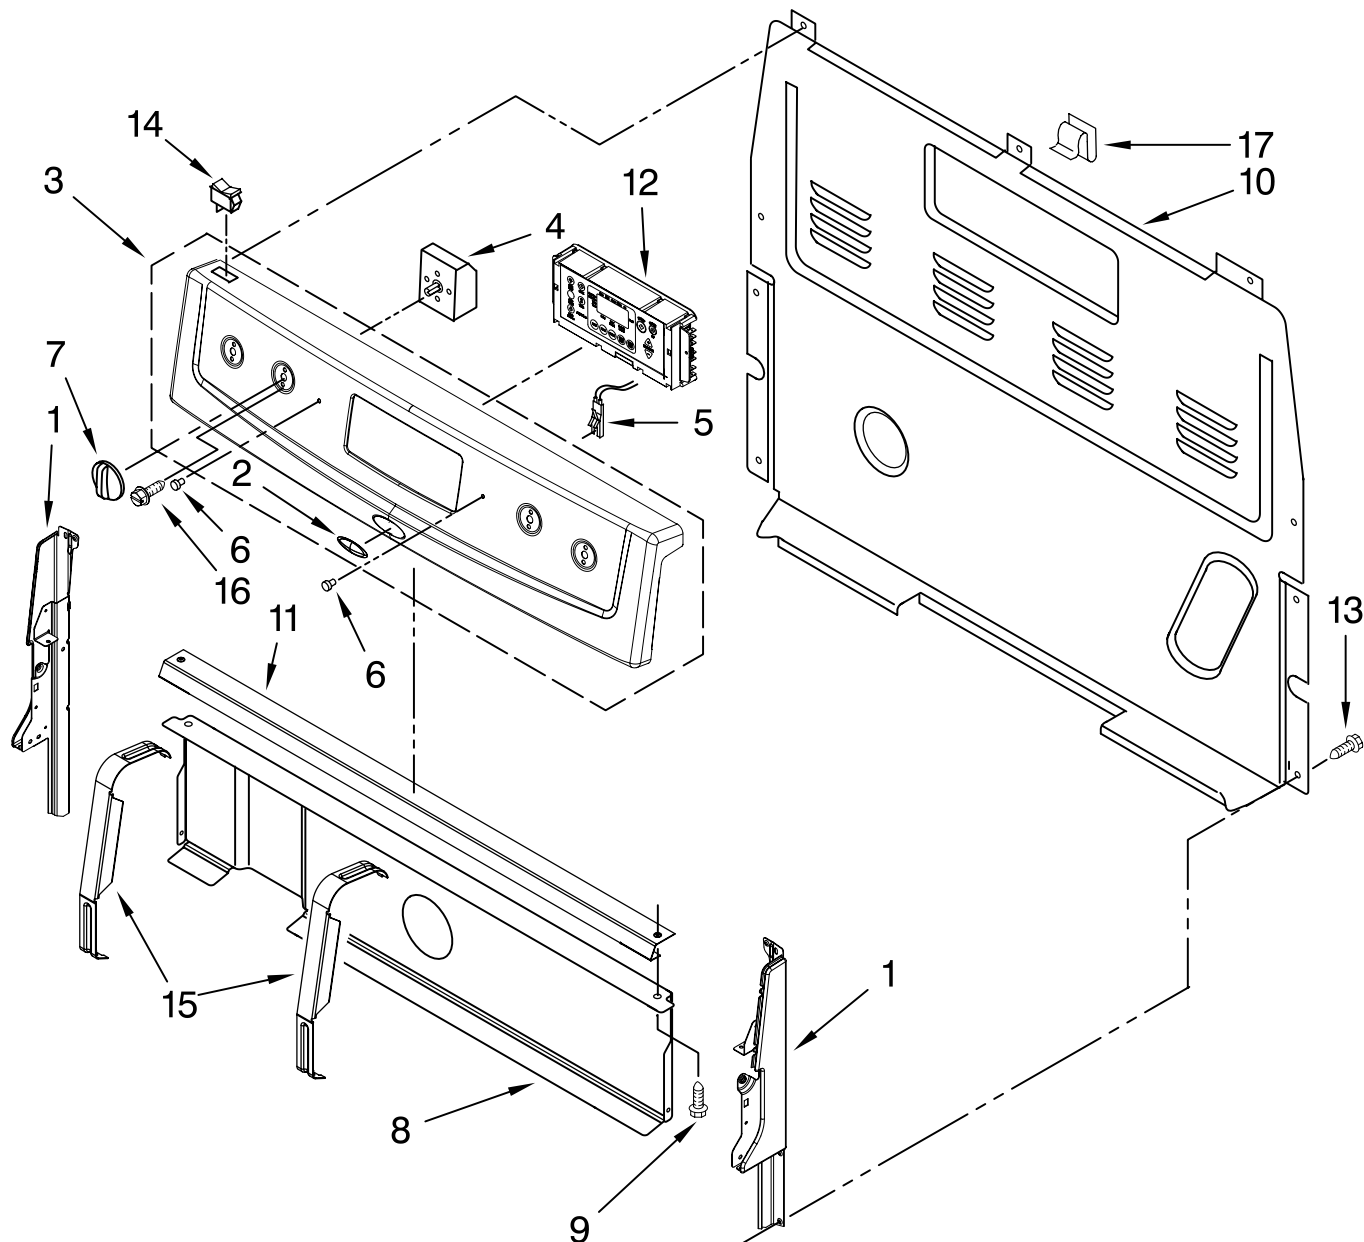

| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--------------------|
| 1 | W10009080 | Black Left |
| | W10009090 | Black Right |
| | W10009040 | White Left |
| | W10009050 | White Right |
| 2 | 9757609 | Nameplate |
| 3 | | Panel, Control |
| | W10118052 | Black |
| | W10117604 | White |
| | W10118053 | Stnls./Unv.Slv.Mdl |


| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--------------------|
| 4 | 9758060 | Switch, Infinite |
| | 3148951 | LF,RF |
| | | LR,RR |
| 5 | 8523265 | Light, Ind. (2) |
| 6 | 3196068 | Lens, Light (2) |
| 7 | | Knob, Infinite (4) |
| | 9761964 | Black |
| | 9761962 | White |
| 8 | W10134247 | Shield, Heat |
| 9 | | Screw |
| | 3196166 | White |
| | 3196168 | Black |
| 10 | 8272473 | Cover, Upper |

| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--------------------|
| 11 | 9762095 | Brkt-Mntg, Console |
| 12 | | Control, Range |
| | W10108140 | Black |
| | W10108130 | White |
| 13 | 3196178 | Screw |
| 14 | | Switch, Rocker |
| | 3149360 | White |
| | 3148564 | Black |
| 15 | 9762078 | Brkt-Mntg, EOC |
| 16 | 3400882 | Screw |
| 17 | 8273564 | Clip |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF367LXSQ3, RF367LXSB3, RF367LXSS3, RF367LXSY3
(Designer White) (Black) (S.Steel)(Universal Silver)

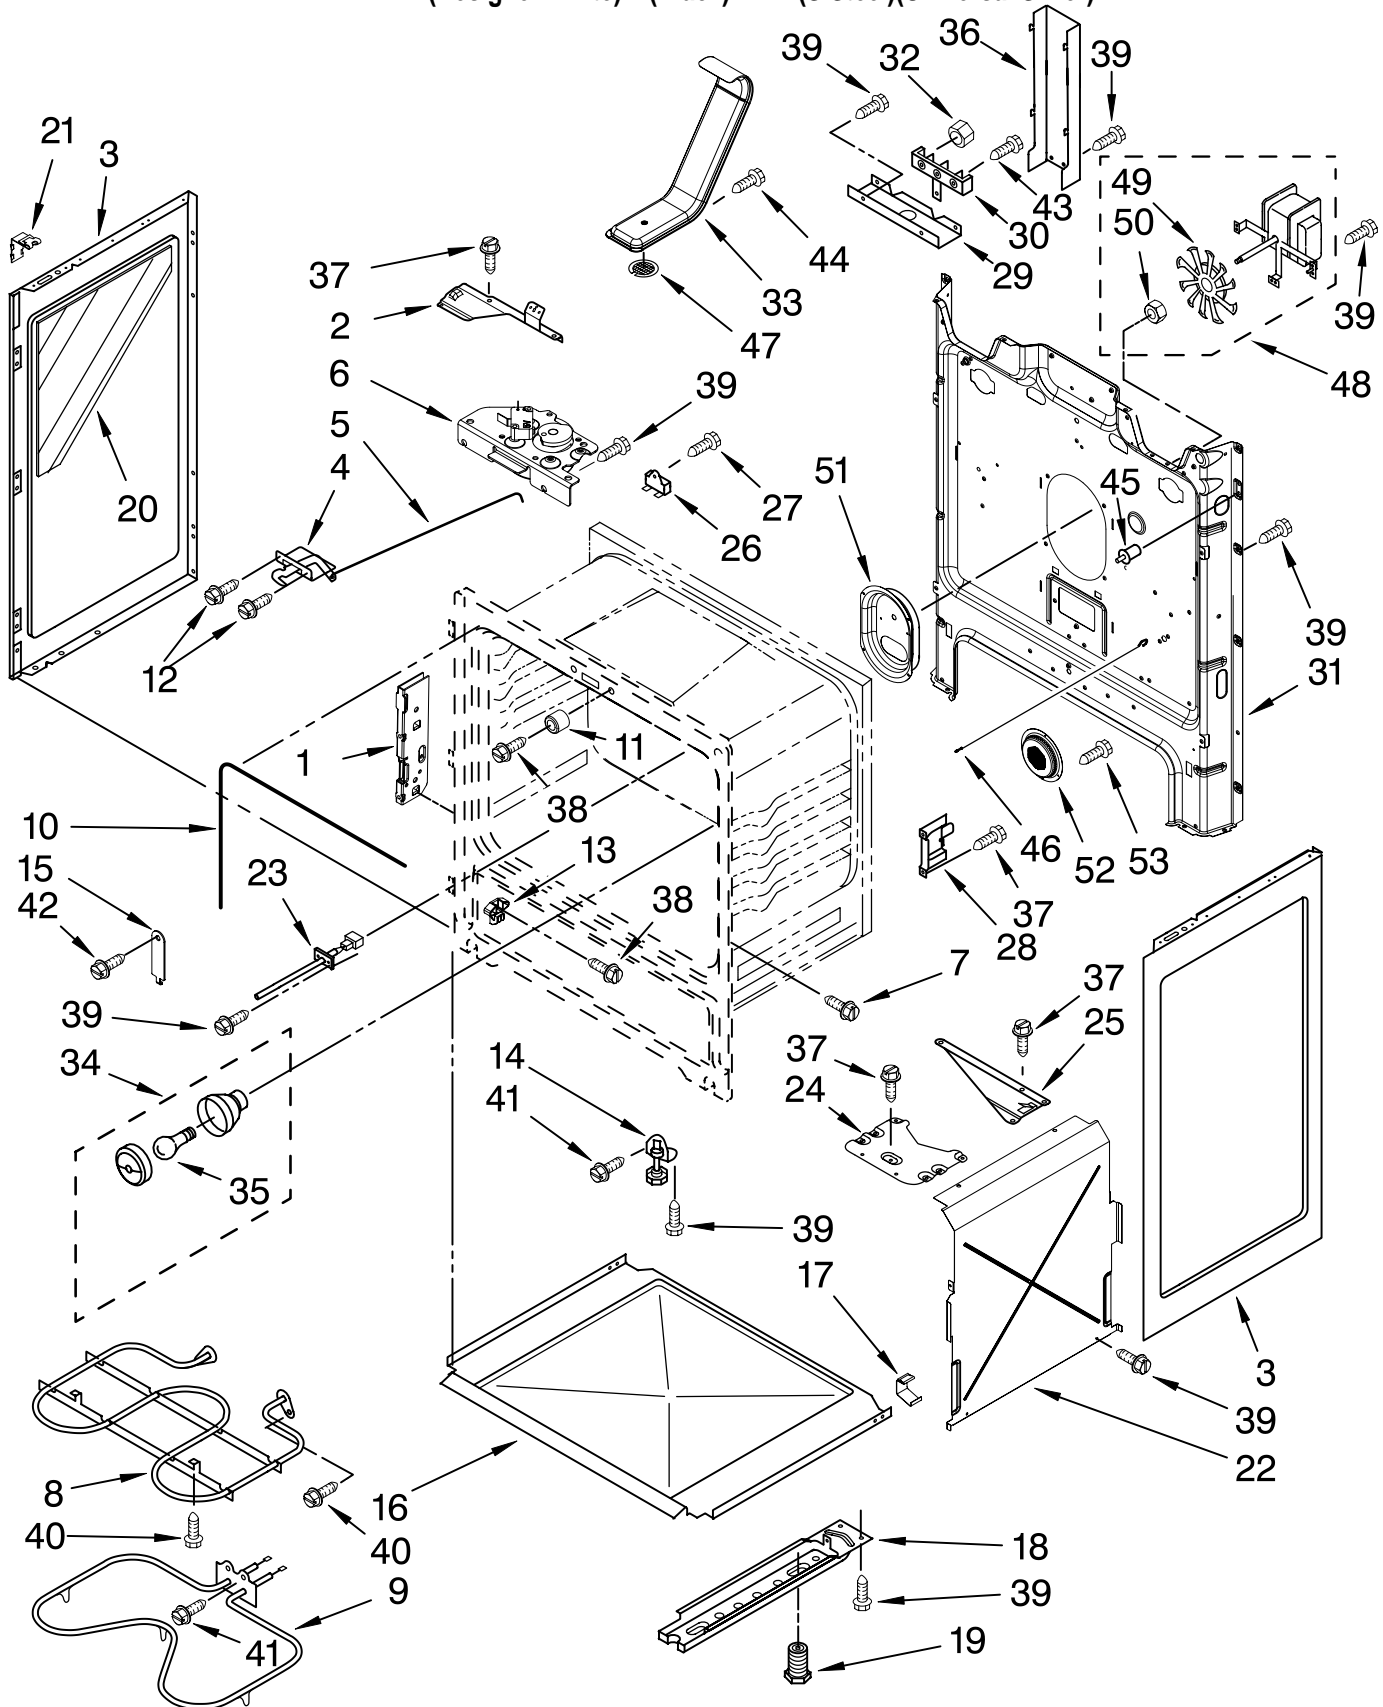

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF367LXSQ3,RF367LXSB3,RF367LXSS3,RF367LXSY3


(Designer White) (Black) (S.Steel)(Universal Silver)

| Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--------------------|------------|----------|--------------------|-------------------|-----------|-------------------|
| 1 | 9760407 | Brkt-Mntg,Dr Hnge | 20 | 9761490 | Insulation | 41 | 3196179 | Screw |
| 2 | 8273905 | Support, Corner LR | 21 | 9761512 | Clip- Mounting | 42 | W10031780 | Screw |
| 3 | | Panel, Side (2) | 22 | 9758238 | Retainer, Side (2) | 43 | 3400016 | Screw |
| | 8053830 | White-Textured | 23 | 8273902 | Sensor, Oven | 44 | 3196566 | Screw |
| | 8053832 | Blk/Stnls/Unv Slv. | 24 | 3195736 | Support, Front (2) | 45 | 9757238 | Switch - Door |
| 4 | 9761013 | Latch, Door | 25 | 3195987 | Support, Corner RR | 46 | 9757239 | Rod - Door Switch |
| 5 | W10078380 | Rod, Latch | 26 | 3196548 | Fuse, Thermal | | | Rear Mount |
| 6 | W10107830 | Latch Asy, Rear | 27 | 3196172 | Screw | 47 | 9761301 | Screen - Catalyst |
| 7 | W10067840 | Screw | 28 | 3186116 | Support, Oven (2) | 48 | 9758925 | Fan, Motor Cnvctn |
| 8 | 9757340 | Element, Broil | 29 | 3186034 | Bracket, Service | 49 | 4452226 | Blade, Fan |
| 9 | 9758541 | Element, Bake | 30 | 9761958 | Block, Terminal | 50 | 4452227 | Nut |
| 10 | 8522416 | Seal, Oven Door | 31 | 9757029 | Back, Main | 51 | 9755776 | Bracket, Fan |
| 11 | 9758701 | Spacer, Door | 32 | 112432 | Nut (3) | 52 | 9755775 | Cover, Fan |
| 12 | 3196560 | Screw | 33 | 9761299 | Vent Tube Asm | 53 | 4449809 | Screw |
| 13 | W10114344 | Glide, Drawer (2) | 34 | 3196701 | Light Socket Assy | INSULATION | | |
| 14 | 3196037 | Foot, Front (2) | 35 | 311255 | Bulb, Oven Light | | | |
| 15 | 9761517 | Clip,Door Mntg(2) | 36 | 9758283 | Cover, Box | 8272616 | | Insulation, Wrap |
| 16 | 8054068 | Tray, Insulation | 37 | 3196165 | Screw | 9755772 | | Insulation, Back |
| 17 | 3196576 | Clip, Panel (6) | 38 | 3196168 | Screw | 8272613 | | Insulation, Vent |
| 18 | 9760314 | Rail, Base (2) | 39 | 3196178 | Screw | | | |
| 19 | W10058460 | Foot, Rear (2) | 40 | 3196174 | Screw | | | |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: RF367LXSQ3,RF367LXSB3,RF367LXSS3,RF367LXSY3
(Designer White) (Black) (S.Steel)(Universal Silver)

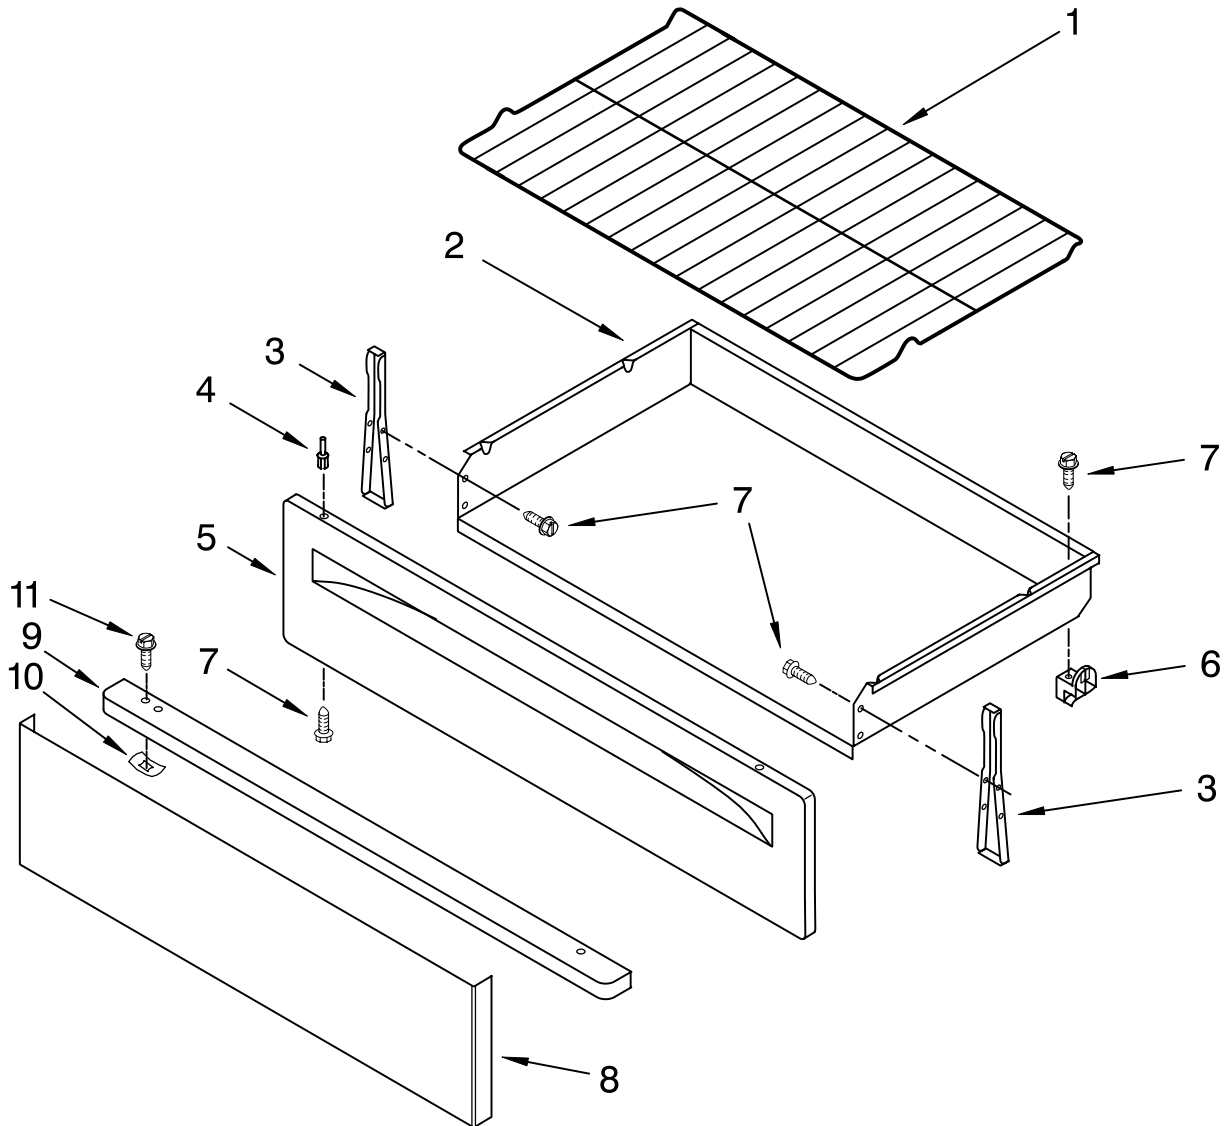


| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--------------------|
| 1 | 3195710 | Rack, Oven (2) |
| 2 | 9761031 | Drawer, Storage |
| 3 | 9758200 | Bracket, Drawer(2) |
| 4 | | Rivet, Push (2) |
| | 3196814 | White |
| | 3196813 | Black |
| 5 | | Drawer Front |
| | 8053339 | White |
| | 8053341 | Black |
| 6 | 8053334 | Glide, Drawer (2) |
| 7 | 3196168 | Screw |
| 8 | 9755798 | Panel,Stls/Unv Svl |
| 9 | | Handle |
| | 9757219 | Stainless Steel |
| | 9762251 | Unv. Silver Mdl. |
| 10 | 9781235 | Clip, Stls Model |
| 11 | W10031790 | Screw(Stls.Model) |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF367LXSQ3, RF367LXSB3, RF367LXSS3, RF367LXSY3

(Designer White) (Black) (S.Steel)(Universal Silver)

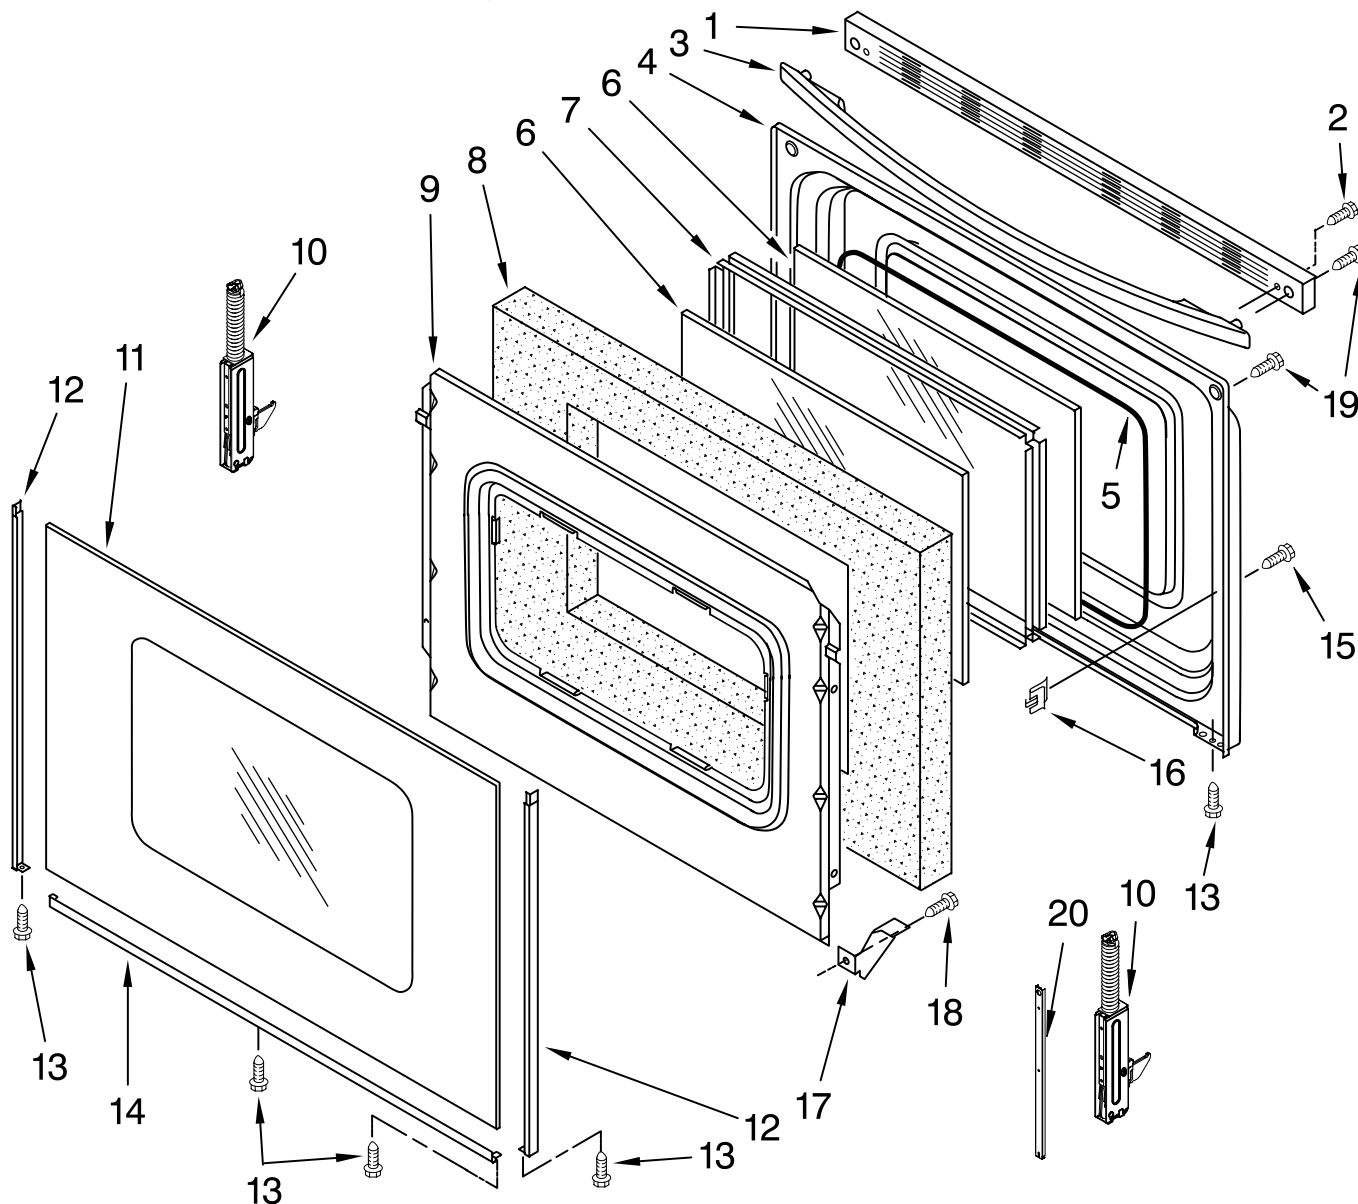

| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|------------------|
| 1 | 9762391 | Trim, Top |
| | 9761975 | Black |
| | 9762394 | White |
| | W10067560 | Black Stainless |
| 2 | 3196164 | Universal Silver |
| 3 | 3196164 | Screw |
| 4 | 9761983 | Handle, Door |
| | 9761982 | Black |
| | 9761982 | White |
| | 9761985 | Universal Silver |
| 5 | 9761344 | Liner, Door |
| 6 | 8522414 | Seal, Window |
| 7 | 9758162 | Glass, Inner (2) |
| 8 | 3186289 | Frame, Glass |

| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--------------------|
| 8 | 8272618 | Insulation, Door |
| 9 | 9761357 | Retainer, Insln |
| 10 | 9761493 | Hinge, Door (2) |
| | 9761493 | White/Black Mdl. |
| | 9761496 | Stnls/Unv Slv Mdl. |
| 11 | W10075990 | Glass, Outer Door |
| | W10075980 | Black |
| | W10075980 | White |
| | 9756435 | Black Stainless |
| 12 | W10128571 | Trim, Side |
| | W10128571 | Black Left |
| | W10128562 | Black Right |
| | W10128572 | White Left |
| | W10128563 | White Right |
| | W10128577 | Gray Left |
| | W10128568 | Gray Right |

| Illus. No. | Part No. | DESCRIPTION |
|------------|-----------|--------------------|
| 13 | 3196160 | Screw |
| 14 | 8523177 | Trim, Bottom |
| | 8523177 | Black |
| | 8523175 | White |
| | 8523180 | Black Stainless |
| | W10067550 | Universal Silver |
| 15 | W10031790 | Screw |
| 16 | 3196025 | Clip, Door Glass |
| 17 | 3196794 | Bracket, Window(2) |
| 18 | 3196165 | Screw |
| 19 | W10031780 | Screw |
| 20 | W10113759 | Strap, Door |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RF367LXSQ3,RF367LXSB3,RF367LXSS3,RF367LXSY3
(Designer White) (Black) (S.Steel)(Universal Silver)

| Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION | Illus. No. | Part No. | DESCRIPTION |
|---|----------|-------------|---|----------|-------------|--|----------|-------------|
| Parts Not Illustrated and Optional Parts (Not Included) | | | INSULATION | | | ACCESSORY PARTS | | |
| <u>SPLICING WIRES--25FT. LENGTH</u> | | | 261514 Insulation, Fiberglass (1-1/2" x 24" x 120") | | | 241430 Foil, Aluminum Oven (18" x 25') | | |
| 242828 Wire, Black 12 Ga. 150° c | | | 240132 Insulation, Fiberglass (2-1/2" x 22" x 120") | | | 3191048 Cleaner, Glass | | |
| 242821 Wire, Blue 14 Ga. 150° c | | | <u>PAINT, TOUCH-UP (1/2oz.)</u> | | | <u>ANTI-TIP KIT</u> | | |
| 242822 Wire, Brown 14 Ga. 150° c | | | 72017 White | | | W10017440 Anti-Tip Kit | | |
| 242830 Wire, Brown 14 Ga. 200° c | | | 4392899 Biscuit | | | <u>WIRING HARNESS PARTS</u> | | |
| 242823 Wire, Green 14 Ga. 150° c | | | 511873 White Porcelain (2 Oz.) | | | W10111767 Harness, Wire (Cooktop Left) | | |
| 242824 Wire, Orange 14 Ga. 150° c | | | <u>PAINT, PRESSURIZED SPRAY (12 oz.)</u> | | | W10111791 Harness, Wire (Cooktop Right) | | |
| 242825 Wire, Red 14 Ga. 150° c | | | 350930 White | | | W10084710 Harness, Wire (Sensor/Dr Switch) | | |
| 242831 Wire, Red 14 Ga. 200° c | | | 4392901 Biscuit | | | W10111777 Harness, Wire (Main) | | |
| 242827 Wire, Yellow 14 Ga. 150° c | | | 285006 Superior Black | | | 8523279 Wire, Ground | | |
| <u>REFINISHING MATERIAL</u> | | | 206922 Primer (White) | | | 313660 Clip, Ground Wire | | |
| 799832 Kit, Porcelain Repair (White) | | | <u>PAINT, BULK (1 qt.)</u> | | | 3196173 Screw | | |
| 242756 Touch-Up Self-Clean(1/2 Pt) | | | 799344 White (Uncut) | | | 3196154 Screw, Ground | | |
| 261582 Grease | | | 4392900 Biscuit(Uncut) | | | | | |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST